

# DD SuperLight Pyramid Tent & DD SuperLight Pyramid Mesh Tent

(sold separately)



The DD SuperLight Pyramid Tent and the DD SuperLight Pyramid Mesh Tent, if used together, make a very lightweight and versatile shelter. It offers full weather protection and plenty of space for one person and gear. Both tents can be set up using a hiking pole (not included) or suspended from a tree.

## Contents of the the DD SuperLight Pyramid Tent stuff sack:

- Tarp tent
- Superlight pegs x 13
- Guylines (2m) x 5

## Contents of the the DD SuperLight Pyramid Mesh Tent stuff sack:

- Mesh tent
- Superlight pegs x 4

## Ventilation

The Pyramid Tent is equipped with sufficient ventilation options. Try to ensure that there is always a good flow of air through the tent to reduce the condensation build-up. As with all tents condensation cannot be avoided completely.

 
## Choosing your pitch

- When choosing your pitching site make sure you pick an even bit of ground. Don't set it up on a slope or uneven ground.
- Remove all sharp objects that might damage the fabric.

## Setting up the DD SuperLight Pyramid Mesh Tent

You can use a hiking pole to set this tent up or alternatively you can suspend it from a tree using the toggle on the top of the tent.

1. Ensuring the entrance is zipped up, spread out the Pyramid Mesh Tent on the ground (it should form a square).
2. Peg all the corner attachment loops.
3. Extend both sections of your hiking pole to around the 130cm mark. Insert the tip of your hiking pole into the eyelet in the base of the tent.

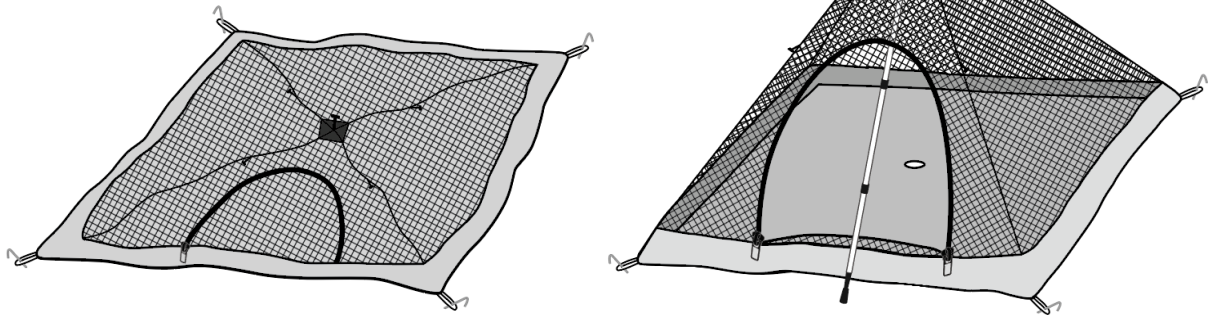

You may need to adjust the height of the pole depending on the hardness of the ground. It is always best not to extend the pole to the maximum initially, as you can adjust the height of the pole from the inside at any time.

## Setting up the DD SuperLight Pyramid Tent

Please note - the corners of the outer tent need to be pegged slightly further out from mesh tent to allow for air circulation.

1. Place the outer tent over the mesh tent so the top attachment loop is aligned with the toggle on the mesh tent.
2. Peg out all the corners very loosely just to mark the space. Make sure the edges are aligned with the Pyramid Mesh Tent. Put one peg through both entrance attachment loops. Adjust all pegs if needed.
3. Tension all of the loops in the middle of the side walls of the outer tent and peg them out.
4. The side attachment points can be used to achieve wind stability. Use guylines to peg them out if needed.
5. Guy out the air vent on the back of the tent to allow the air circulation inside the tent.

If not using a hiking pole, then please use an eyelet on the inside of the outer tent to attach the mesh tent to it.

